



Please contact us at 1-800-790-8896 if you need further assistance or have any questions.

*Thank you for your continued business!*

**Pet Waste Eliminator**  
[www.petwasteeliminator.com](http://www.petwasteeliminator.com)

**Weave Posts**  
Item PAWP5





Please contact us at 1-800-790-8896 if you need further assistance or have any questions.

*Thank you for your continued business!*


**Pet Waste Eliminator**

[www.petwasteeliminator.com](http://www.petwasteeliminator.com)


### **SAFETY WARNINGS & EQUIPMENT INSPECTION**

- Owners and installers please note these safety warnings and make use of this checklist on a regular basis.
- Follow installation instructions when erecting equipment.
- Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.
- Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.
- All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.
- All equipment should be free of rust and repainted whenever necessary to deter rusting.
- We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.
- Never add components not intended for use with this product.
- Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.
- Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.
- Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.
- Check to be sure all fittings are tight and that bars and pipes do not move.
- Replace all worn S-hooks. S-hooks must be completely closed. Failure to close S-hooks can result in serious injury to the user. NEVER reuse S-hooks.
- Test for free movement of swing hanger and other moving attached parts.
- Check for worn chains and replace them.
- A soft resilient surface should be placed under all swings extending at least twice the height of the top rail both front and back.

# HARDWARE

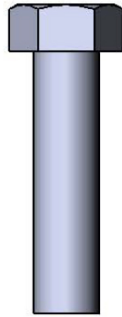





3/8" x 1-1/2"  
Machine Bolt

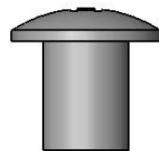

3/8" Barrel Nut

Please contact us at 1-800-790-8896 if you need further assistance or have any questions.

## TOOLS REQUIRED

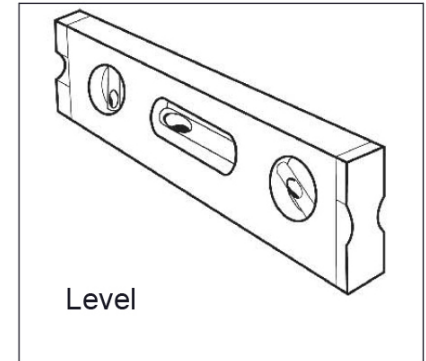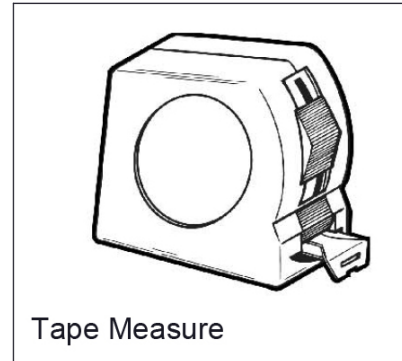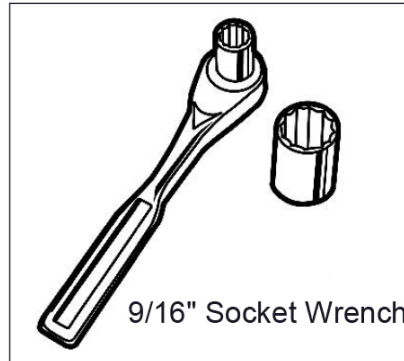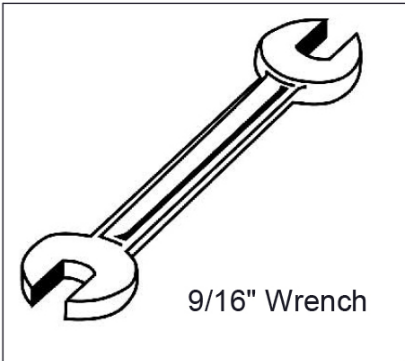

## PRODUCT SPECIFICATIONS

### WEAVE POST


Frame: 3/8" x 3" flat plate. 1-1/4 sch 40 Aluminum tubing for inground mounts and weave posts. Weave posts pivot on zinc plated springs.

Coating: Electrostatic powder coated application oven cured.

Dimensions: 132" long x 2" wide x 35" tall. Distance between posts is 22".

Please contact us at 1-800-790-8896 if you need further assistance or have any questions.


# COMPONENTS

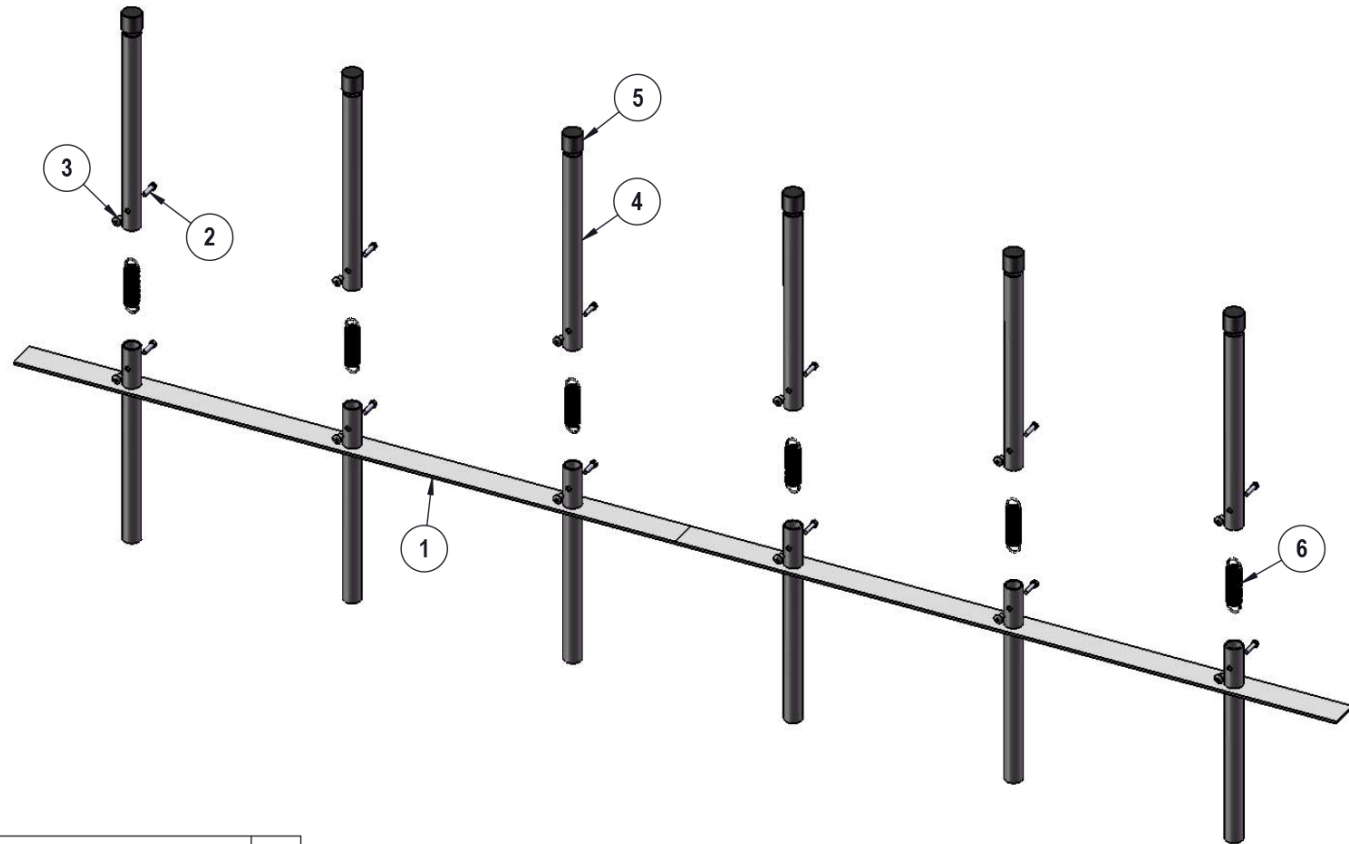

ITEM NO.	DESCRIPTION	QTY
1	Weave Post Base	2
2	3/8" x 1 1/2" Machine Bolt (SS)	12
3	3/8" Barrel Nut SS	12
4	Weave Post	6
5	Weave Post Upright Plastic Cap (NPS1-1/4B)	6
6	Weave Post Spring	6


Please contact us at 1-800-790-8896 if you need further assistance or have any questions.

# STEP 1

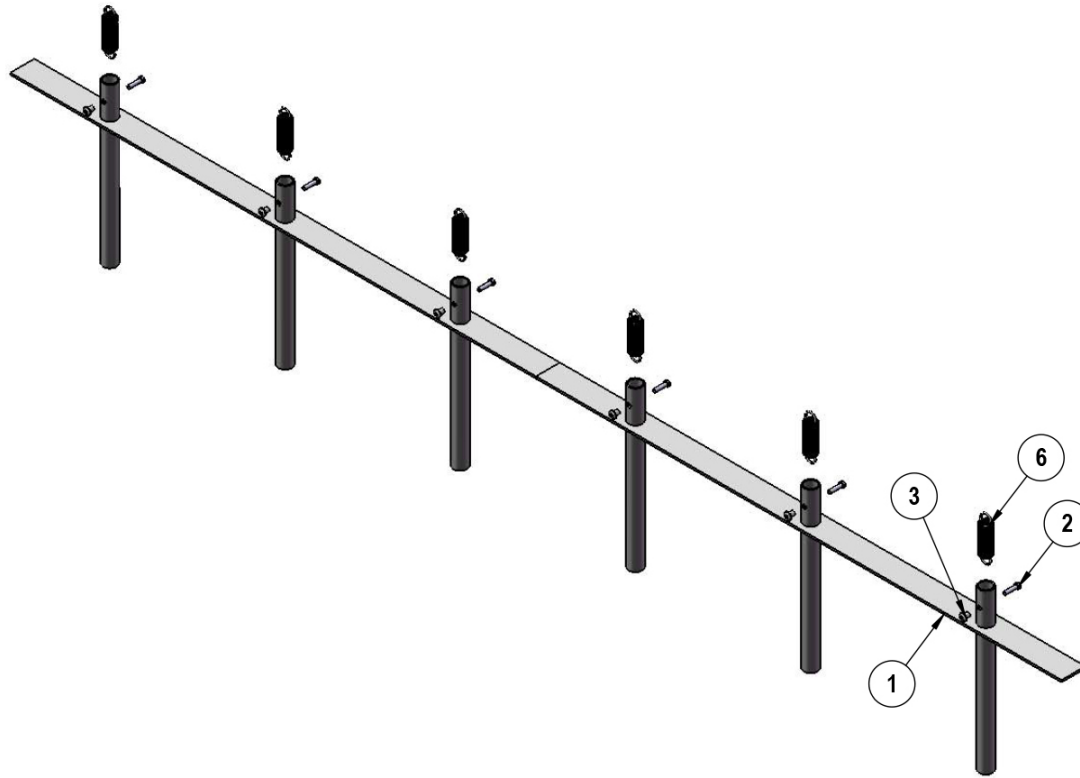

Insert Springs into Weave Post Base and bolt together using given hardware. Hardware is placed through loop on spring.

## STEP 2

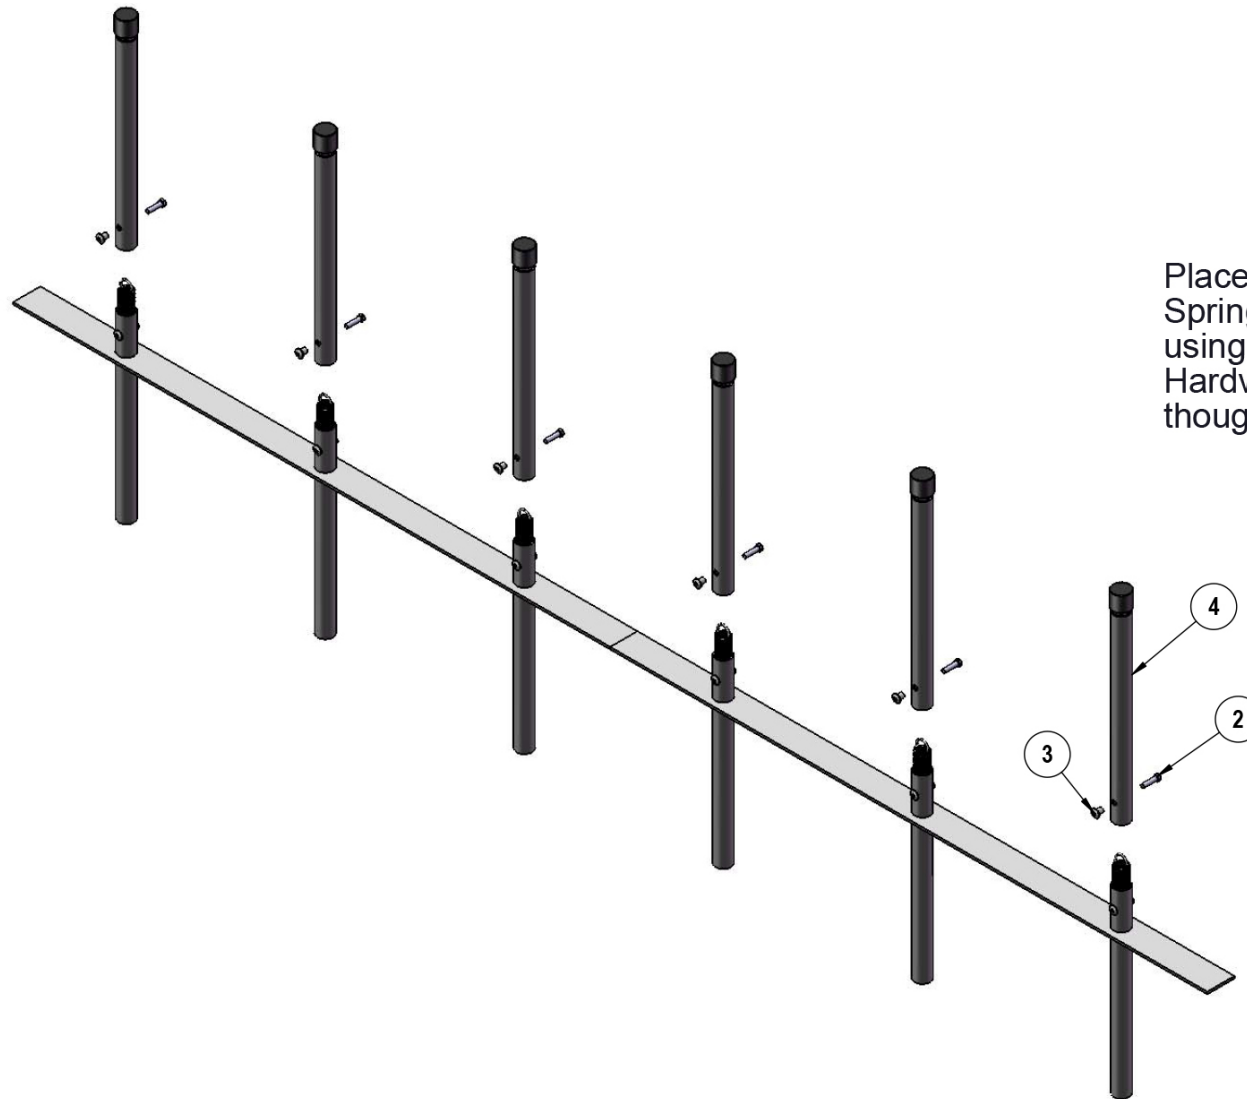


Place Weave Post onto Spring and bolt together using given hardware. Hardware is placed though loop of spring.




# FOOTINGS

Estimated Required Concrete:  
12 - 50 lb. bags of concrete mix

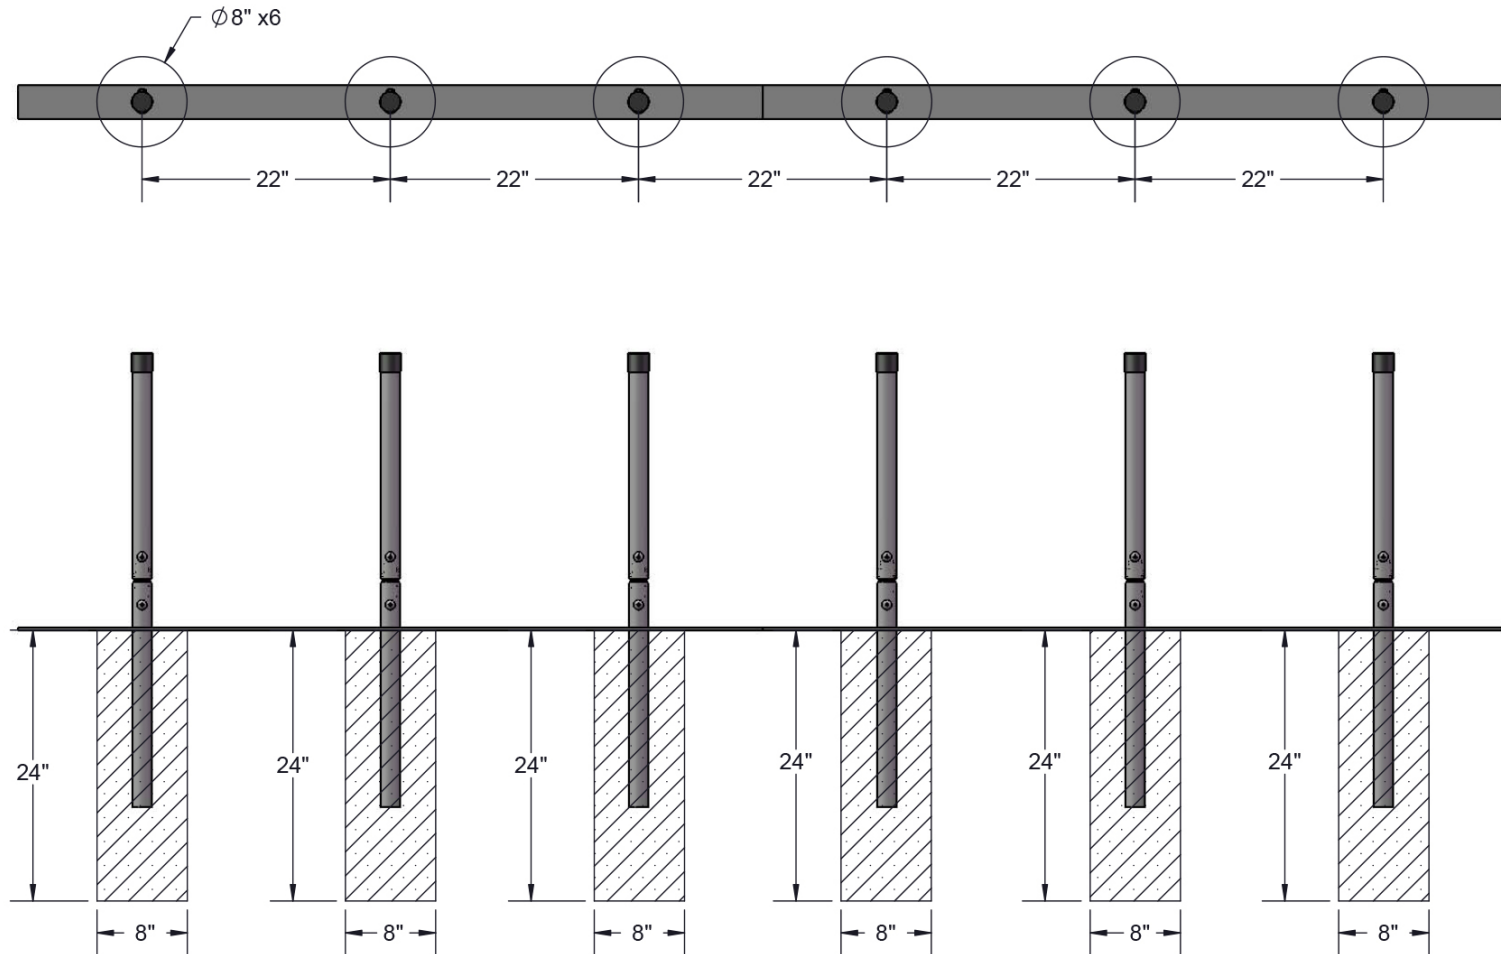

Please contact us at 1-800-790-8896 if you need further assistance or have any questions.

# OVERALL DIMENSIONS

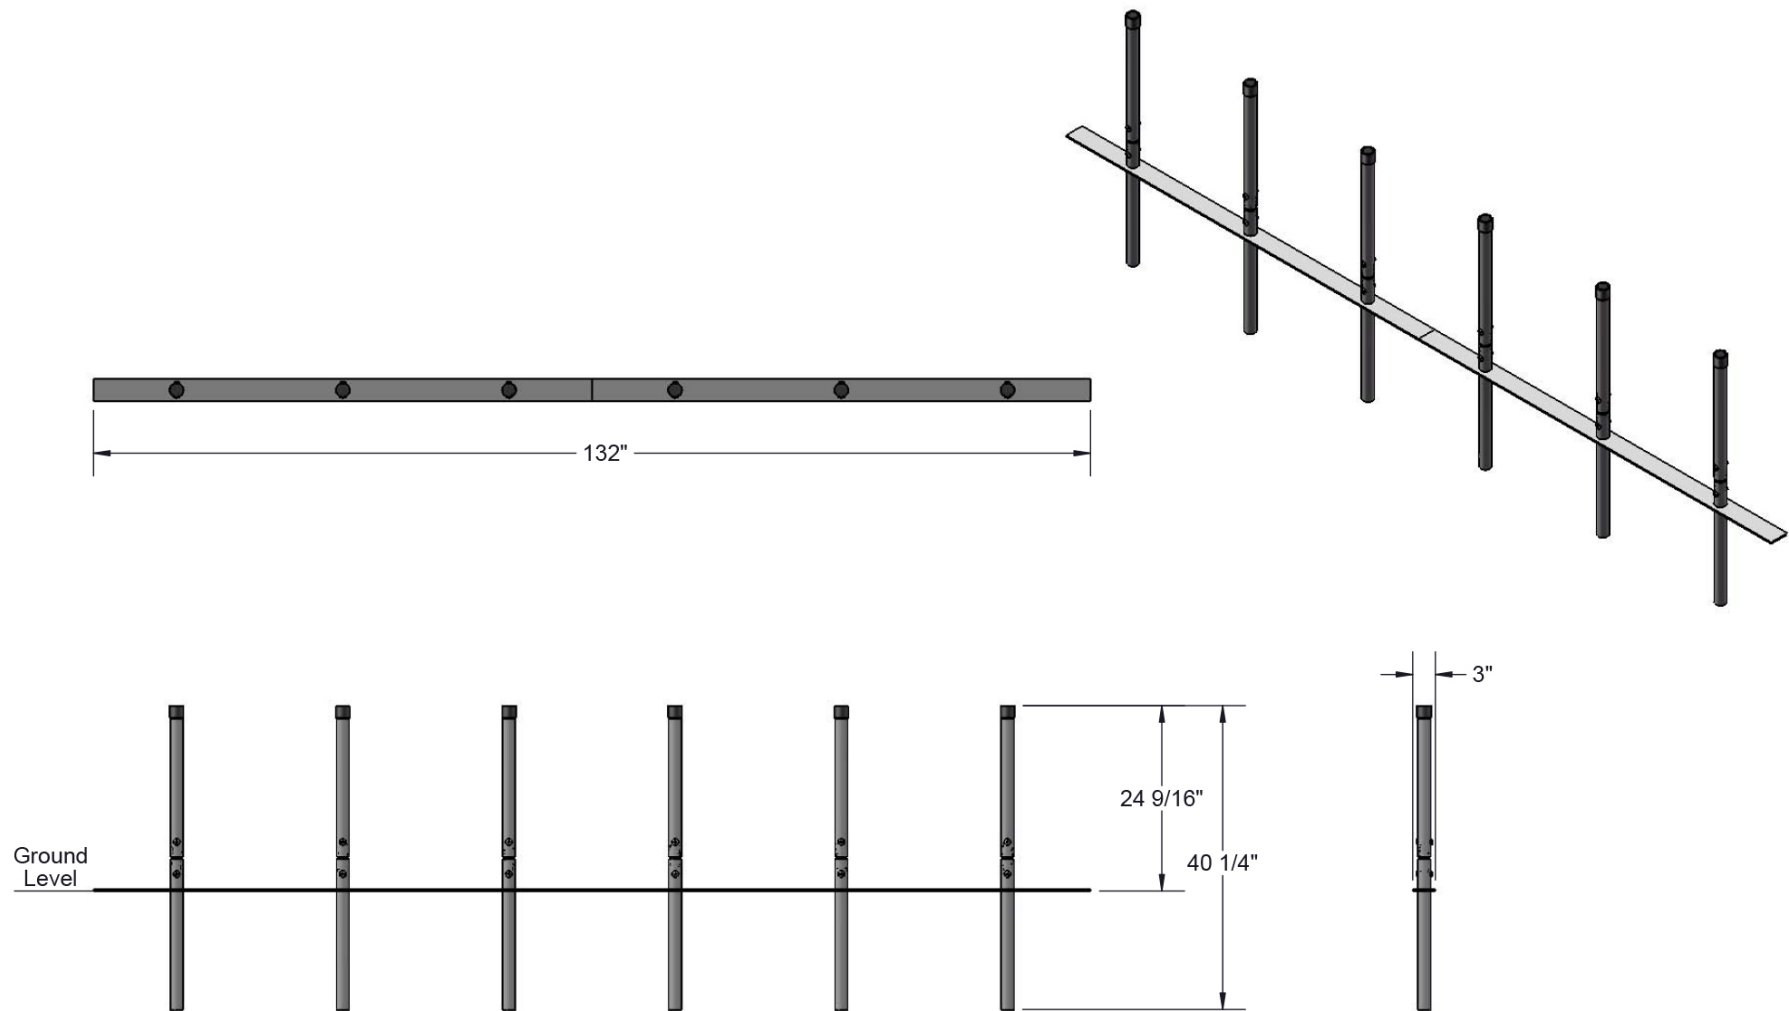

Please contact us at 1-800-790-8896 if you need further assistance or have any questions.