

ITEM: E46

Combo Pet Waste Station

Combo Kit Includes:

- A. 1 12" x 12" Aluminum Sign
- B. 1 Dispenser Box (with lock & key) (Item E15)
- C. 3-piece U-Channel Sign Post (Item E19)
- D. 1 10-gal Waste Receptacle with attached lid (Item E10)
- E. 2 U-Channel Post Hardware Sets (Item SSH105) — a total of 4 nuts, 4 bolts and 8 washers
- F. 2 Hardware Sets for Dispenser and Sign (Item SSH103) — a total of 4 nuts, 4 bolts and 8 washers
- G. 1 Trash Can Hardware Set (Item SSH104) — a total of 2 nuts, 2 bolts and 2 washers
- H. 200 Pet Waste Bags (Item E40)
- I. 50 Trash Receptacle Liners

Optional Tools Needed:

- Socket Driver or Adjustable Wrench
- Level
- Post Hole Driver





PET WASTE ELIMINATOR COMBO STATIONS:

- ★ Lifetime Guarantee
- ★ Rust-Proof Construction
- ★ Locking dispenser box helps deter bag theft

NEVER RUN OUT OF BAGS AGAIN!

Join our no-obligation Refill Program to
save **HUNDREDS** of dollars each year!

Call to join today!

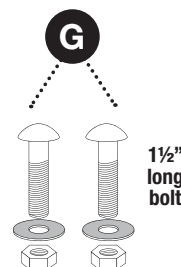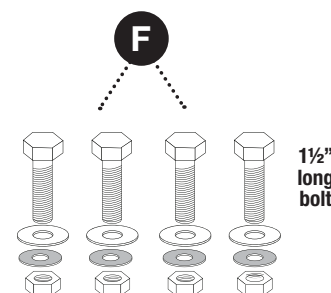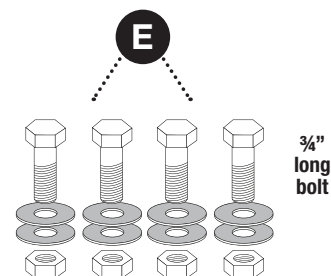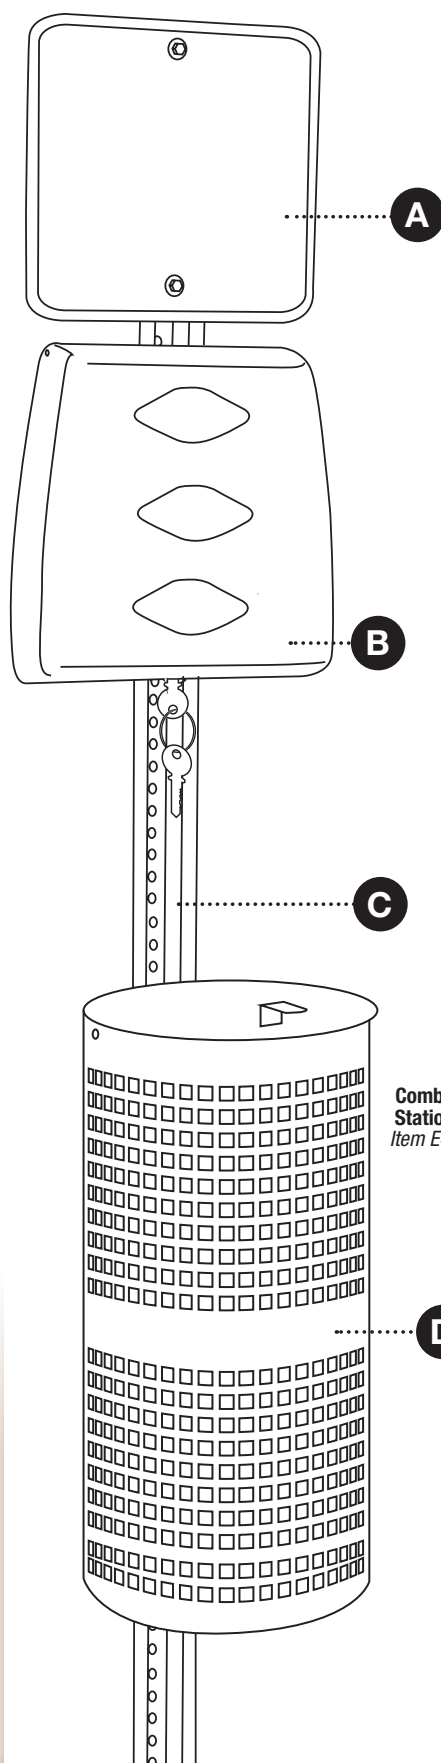


Combo
Station
Item E46



**Pet Waste
ELIMINATOR**
www.PetWasteEliminator.com


1. Pole Assembly and Installation

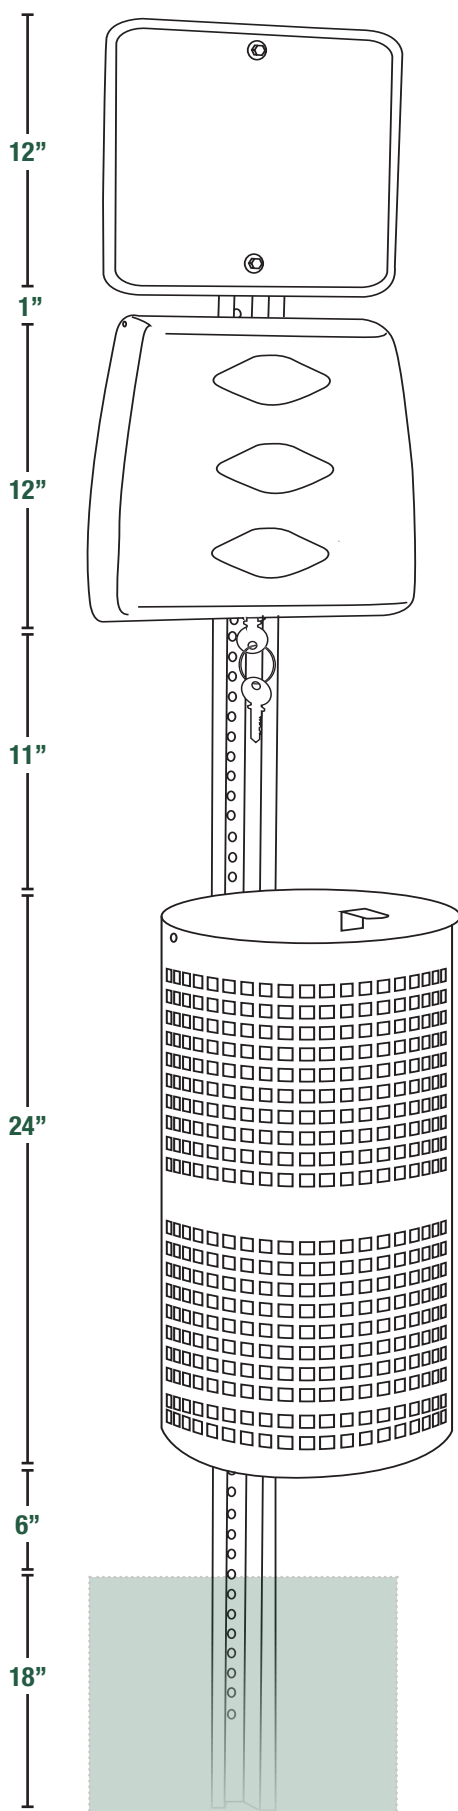

1. Using a post hole driver (not included), drive one of the three sign post segments (C) approximately 18" into the ground. Make sure that the "hollow" or "recessed" side of the post is facing where you want the front of the unit to face. We recommend that the pole is no less than 15" underground to support the weight of the waste receptacle (D) properly. Use a level (not included) to ensure the pole is standing upright and will properly support the unit. Adjust if necessary.

2. Using the first sign hardware set (E), connect a second pole segment (C) to the installed segment. Overlap the second section behind (not on the concave side of the pole) by 5 holes. Join the poles together at the end of each post section (the washer and nuts should be on the outside/back of the post.) There should be 3 holes between the two bolt assemblies.

3. Repeat with the remaining pole segment (C) and hardware set (E).

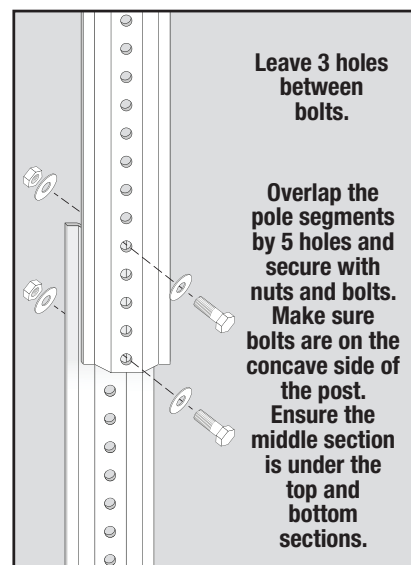

2. Station Assembly

1. Using the first sign hardware set (F), secure the sign (A) to the top of the steel post (C) with a bolt and washer at the top of the sign and another at the bottom. The washers should be next to the printed side (front) of the sign and the nuts are secured on the outside/back of the post. To ensure the best outcome, make sure the sign is flush with the top of the pole.

2. Using the second dispenser hardware set (F), attach the dispenser box (B) directly under the sign leaving about 1" in-between. Open the box, align the holes to the steel post and attach with the two bolts. The washers should be used on the inside of the box with the nuts secured to the outside/back of the post.

3. Using the trash can hardware set (G), secure the waste receptacle (D) to the steel post at the top and the bottom with the washers facing the inside of the waste can and the nuts on the outside/back of the post. Make sure that the receptacle is approximately 10-12 inches below the dispenser box to allow for the lid to be open and trash to be easily removed. This should leave your receptacle at least 6 inches off the ground which will help prevent any damage to the station from bad weather conditions.

3. Station Preparation

1. Insert one waste liner (I) into the waste receptacle and fold over the rim.

2. Open the dispenser box and insert up to 3 boxes of pet waste bags (H) onto the shelves inside the dispenser. Open each box of bags and pull the top bag through the corresponding hole. Close and lock the dispenser and you're all set!

Please contact us immediately if you have any missing or damaged items or need any additional assistance. Thank you.