

ITEMS: E48

Low Profile Metal Pet Waste Station

Designer Kit Includes:

- A. 1 Dispenser Box (*Item E1D*)
- B. 1 6-ft Steel Sign Post (*Item SP6*)
- C. 1 10-gal Waste Receptacle with attached lid (*Item E10*)
- D. 2 Mounting Hardware Sets— each set includes 2 nuts, bolts and washers
- E. 80 Pet Waste Bags (*Item E41*)
- F. 50 Waste Receptacle Liners

Optional Tools Needed:


- Socket Driver or Adjustable Wrench
- Level
- Post Hole Driver

PET WASTE ELIMINATOR DESIGNER STATIONS:

- ★ Low profile design is ADA Compliant
- ★ Lifetime Guarantee
- ★ Rust-Proof Construction
- ★ Universal Fit holds all bags on header cards or rolls

NEVER RUN OUT OF BAGS AGAIN!

Join our exclusive, no-obligation Refill Program & save HUNDREDS of dollars each year!

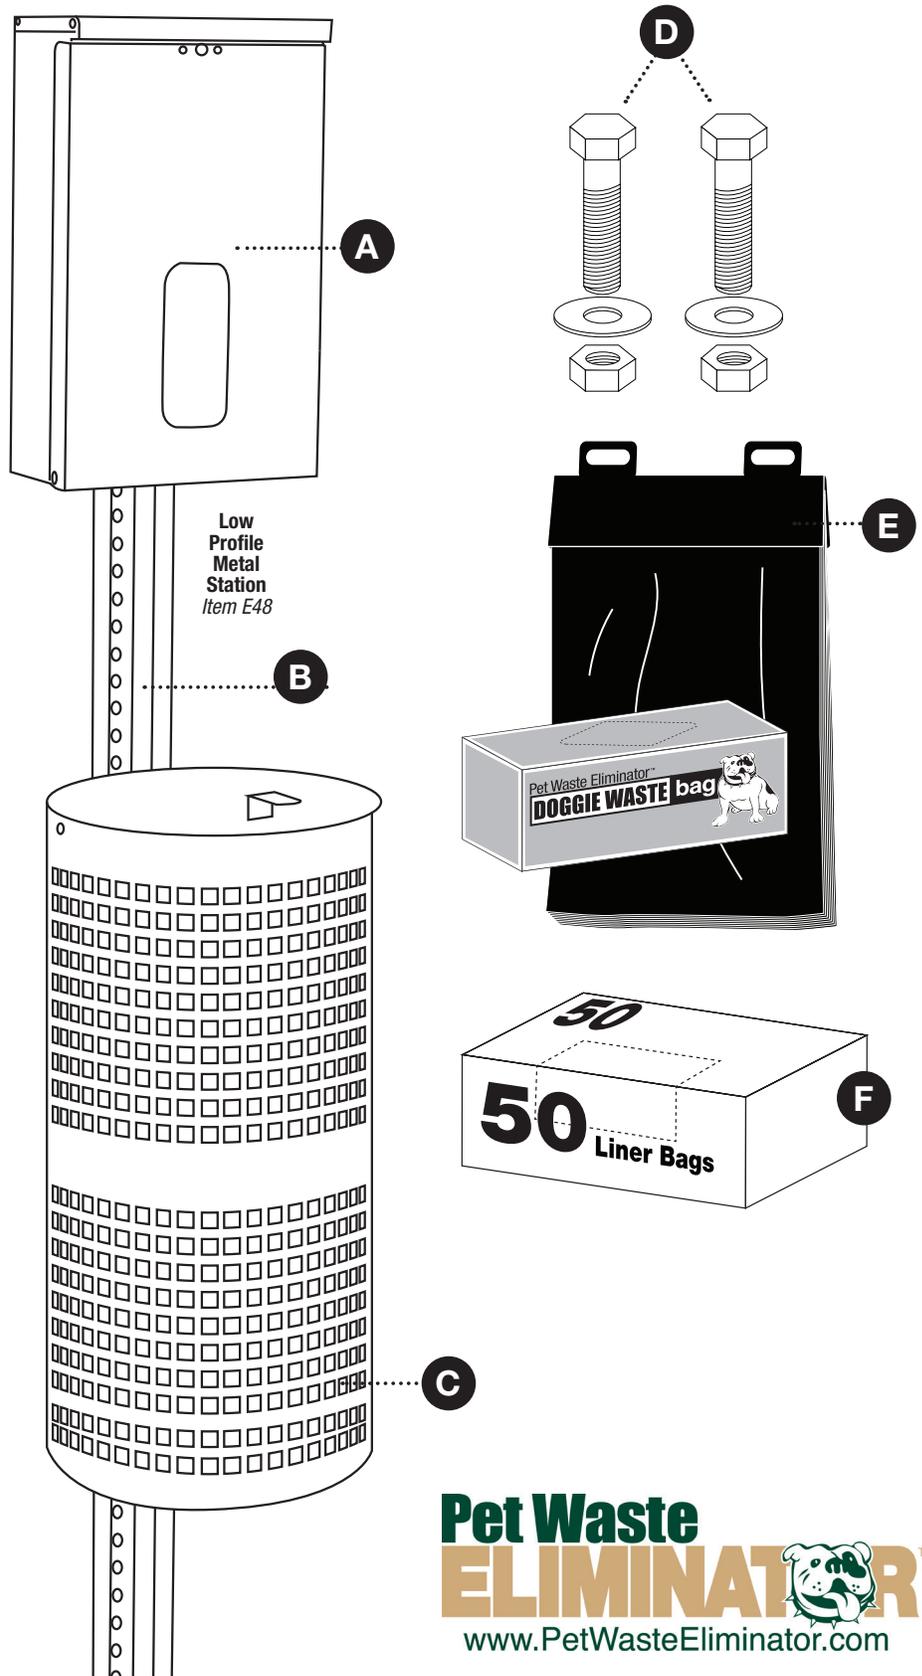

Pet Waste ELIMINATOR

www.PetWasteEliminator.com

1. Pole Installation

Using a post hole driver (not included), drive the sign post (B) approximately 12-15" into the ground. Make sure that the "hollow" or "recessed" side of the post is facing where you want the front of the unit to face. We recommend that the pole is no less than 12" underground to support the weight of the waste receptacle (C) properly. Use a level (not included) to ensure the pole is standing upright and will properly support the unit. Adjust if necessary.

2. Station Assembly

1. Using the first hardware set (D), attach the dispenser box (A) directly at the top of the sign post. Open the box, align the holes to the steel post and attach with the two bolts. The washers should be used on the inside of the box with the nuts secured to the outside/back of the post.
2. Using the second hardware set (D), secure the waste receptacle (C) to the steel post at the top and the bottom with the washers facing the inside of the waste can and the nuts on the outside/back of the post. Make sure that the receptacle is approximately 12 inches below the dispenser box to allow for the lid to be open and trash to be easily removed. This should leave your receptacle approximately 6 inches off the ground which will help prevent any damage to the station from bad weather conditions.

3. Station Preparation

Insert one waste liner (F) into the waste receptacle and fold over the rim. Open the dispenser box and insert up to 10 header cards of bags (E) onto the prongs inside the dispenser. Close the station, pull the top bag through the hole and you're all set!

Note: This dispenser fits all types of bags. If you are using boxed bags (Item E40), you will need to slip a converter (Item E22) onto the prongs inside the dispenser and insert the boxes into the converter.

Please contact us immediately if you have any missing or damaged items or need any additional assistance. Thank you.

